

BXR836HYD RIDE-ON TROWEL





www.BARTELLGLOBAL.com

Bartell Morrison Inc.
170 Traders Blvd E
Mississauga, Ontario, Canada
L4Z 1W7
Tel: (647) 953-4100
Fax: (647) 953-4101

Bartell Morrison USA LLC
200 Commerce Drive, Unit A
Freehold, NJ, USA
07728
Tel: (848) 225-8100
Fax: (848) 225-8101

SPE International Ltd
Honeyholes Lane
Dunholme, Lincoln, England
LN2 3SU
Tel: 01673 860709
Fax: 01673 861119

Innovatech
4701 Allmond Ave
Louisville, Kentucky, USA
40209
Tel: (425) 405-9100
Fax: (425) 405-9101

ORIGINAL LANGUAGE

© 2021 *Bartell Morrison Inc.*

No part of this work may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage or retrieval system without the prior written permission of Bartell Morrison Inc. unless such copying is permitted by federal copyright laws.

Address inquiries or reference permissions care of:
Bartell Morrison Inc., 170 Traders Blvd E., Mississauga, Ontario, Canada, L4Z 1W7

REV.	DATE	DESCRIPTION	APPROVED BY:
0	08/2022	FIRST RELEASE	A. Nakkila
1	07/2023	Updated Part numbers	A. Nakkila



TABLE OF CONTENTS

<u>PARTS LIST 1 - RIDE ON TROWELS</u>	3
BXR836HYD, FRAME	3
BXR836HYD, FRAME - PARTS LIST 1	4
<u>PARTS LIST 2 - RIDE ON TROWELS</u>	6
BXR836HYD, POWER SYSTEM	7
BXR836HYD, POWER SYSTEM - PARTS LIST 2	8
<u>PARTS LIST 3 - RIDE ON TROWELS</u>	10
BXR836HYD, STEERING AND BLADE PITCH SYSTEM	11
BXR836HYD, STEERING AND BLADE PITCH SYSTEM - PARTS LIST 3	12
<u>PARTS LIST 4 - RIDE ON TROWELS</u>	13
BXR836HYD, GEARBOX ASSEMBLY, LEFT (CW)	13
BXR836HYD, GEARBOX ASSEMBLY LEFT (CW) - PARTS LIST 4	14
<u>PARTS LIST 5 - RIDE ON TROWELS</u>	16
BXR836HYD, GEARBOX ASSEMBLY, RIGHT (CCW)	17
BXR836HYD, GEARBOX ASSEMBLY RIGHT (CCW) - PARTS LIST 5	18
<u>PARTS LIST 6 - RIDE ON TROWELS</u>	20
BXR836HYD, HYDRAULIC SYSTEM COMPONENTS	21
BXR836HYD, HYDRUALIC SYSTEM COMPONENTS - PARTS LIST 6	22
<u>PARTS LIST 7 - RIDE ON TROWELS</u>	23
BXR836HYD, SPRAY SYSTEM	23
BXR836HYD, SPRAY SYSTEM - PARTS LIST 7	23
<u>PARTS LIST 8 - RIDE ON TROWELS</u>	24
BXR836, FOOT THROTTLE KIT	24
BXR836, FOOT THROTTLE KIT - PARTS LIST 8	24
<u>PARTS LIST 9 - RIDE ON TROWELS</u>	25
BXR836, TRANSPORTER	25
BXR836, SPRAY SYSTEM - PARTS LIST 7	26

PARTS LIST 1 – RIDE ON TROWELS

BXR836HYD, FRAME

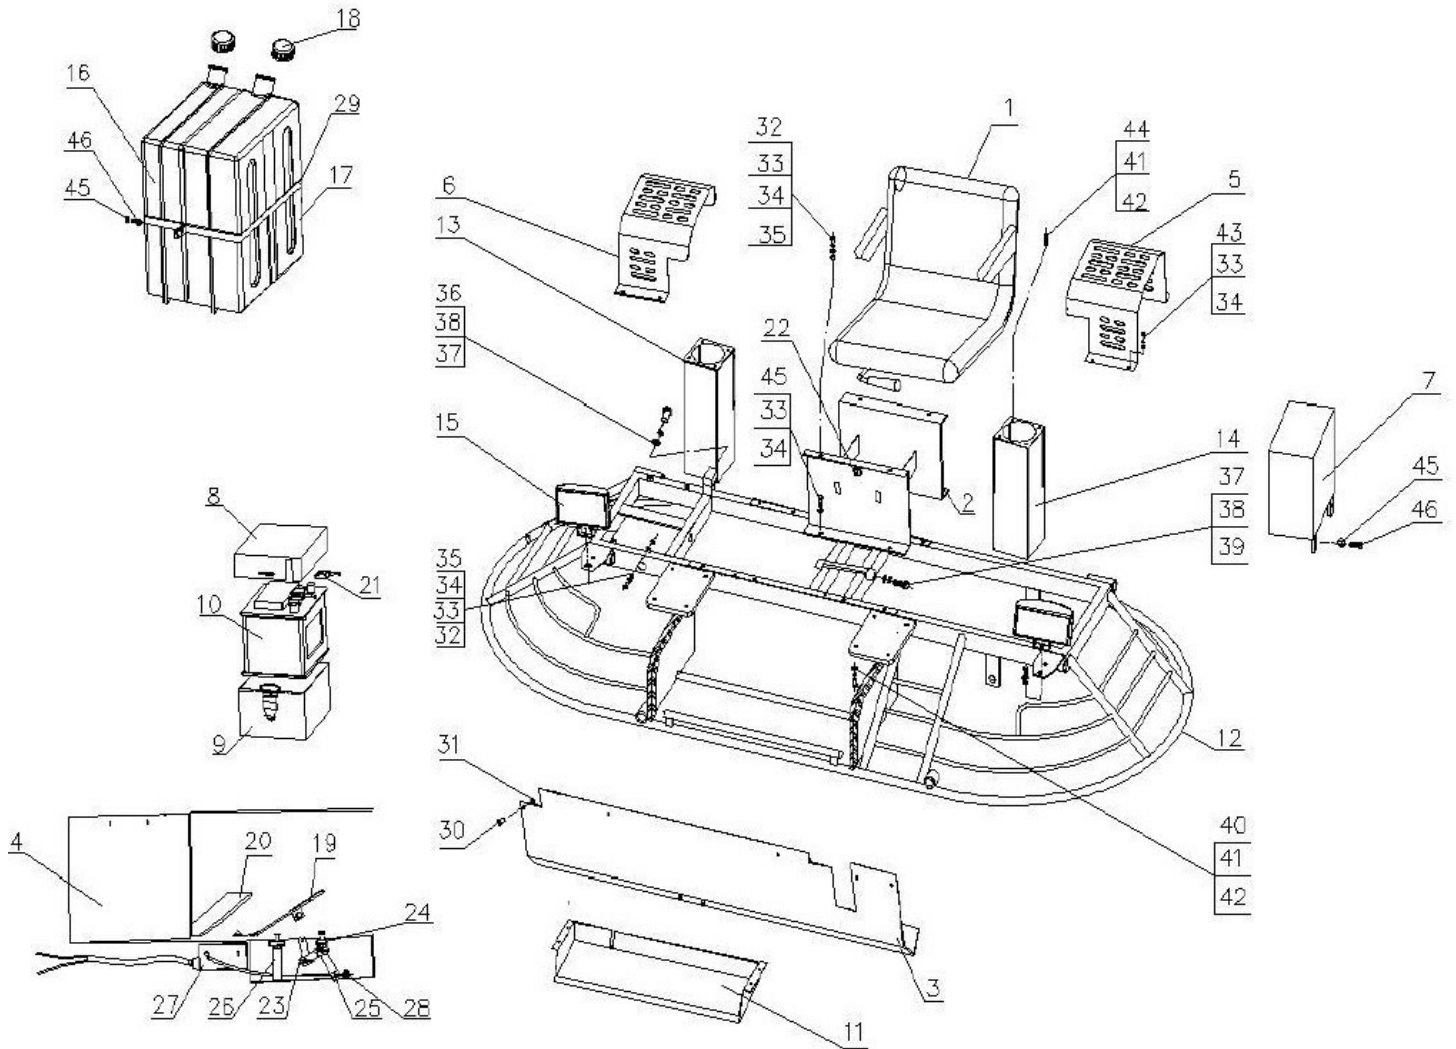


Figure 1: Frame



BXR836HYD, FRAME – PARTS LIST 1

Item #	Part #	Description	QTY	Remarks
1	88836H0453	SEAT	1	
2	88836H0879	SEAT FRAME	1	
3	88836H0538	COVER PLATE, BOTTOM	1	
4	88836H1436	FOOT PLATE	1	
5	88836H0539L	COVER PLATE, LEFT	1	
6	88836H0539R	COVER PLATE, RIGHT	1	
7	24248	BELT GUARD	1	
8	24243	BATTERY COVER	1	
9	888360464	BATTERY BOX	1	
10	888360019	BATTERY	1	
11	918361437	COVER PLATE, THROTTLE	1	
12	88836H0452	GUARD RING	1	
13	88836H054R	HANDLE FRAME, RIGHT	1	
14	88836H054L	HANDLE FRAME, LEFT	1	
15	888360598	LIGHT	2	
16	888361073	WATER TANK, PLASTIC	1	
17	18150	KIT CARB FUEL TANK & PARTS 6 GAL	1	
18	24253	TANK CAP FOR PLASTIC WATERTANK	1	
19	888360592a	THROTTLE CONTROL PEDAL	1	
20	24216	SAFETY SWITCH PEDAL	1	
21	888360968	CONNECTOR, BATTERY	2	
22	888369539	SWITCH	1	
23	888361425	FOOT THROTTLE PART	1	
24	888361426	FOOT THROTTLE PART	1	
25	888361427	FOOT THROTTLE PART	1	
26	888361428	FOOT THROTTLE PART	1	
27	24216	SAFETY SWITCH	1	
28	884365403	CLAMP	1	
29	88836H1378	TANK FRAME	2	
30	889902	BOLT	4	
31	889023	NUT	4	
32	889098	BOLT	8	
33	889037	SPRING WASHER	20	
34	889038	WASHER	20	
35	889306	NUT	8	
36	889511	BOLT	1	
37	889661	WASHER	3	

CONTINUED ON NEXT PAGE

CONTINUED FROM PREVIOUS PAGE				
38	889504	SPRING WASHER	3	
39	889512	BOLT	2	
40	889133	BOLT	8	
41	889022	SPRING WASHER	16	
42	889330	WASHER	16	
43	889097	BOLT	12	
44	889380	BOLT	8	
45	889236	NUT	4	
46	889040	BOLT	4	

INTENTIONALLY LEFT BLANK



PARTS LIST 2 – RIDE ON TROWELS

BXR836HYD, POWER SYSTEM

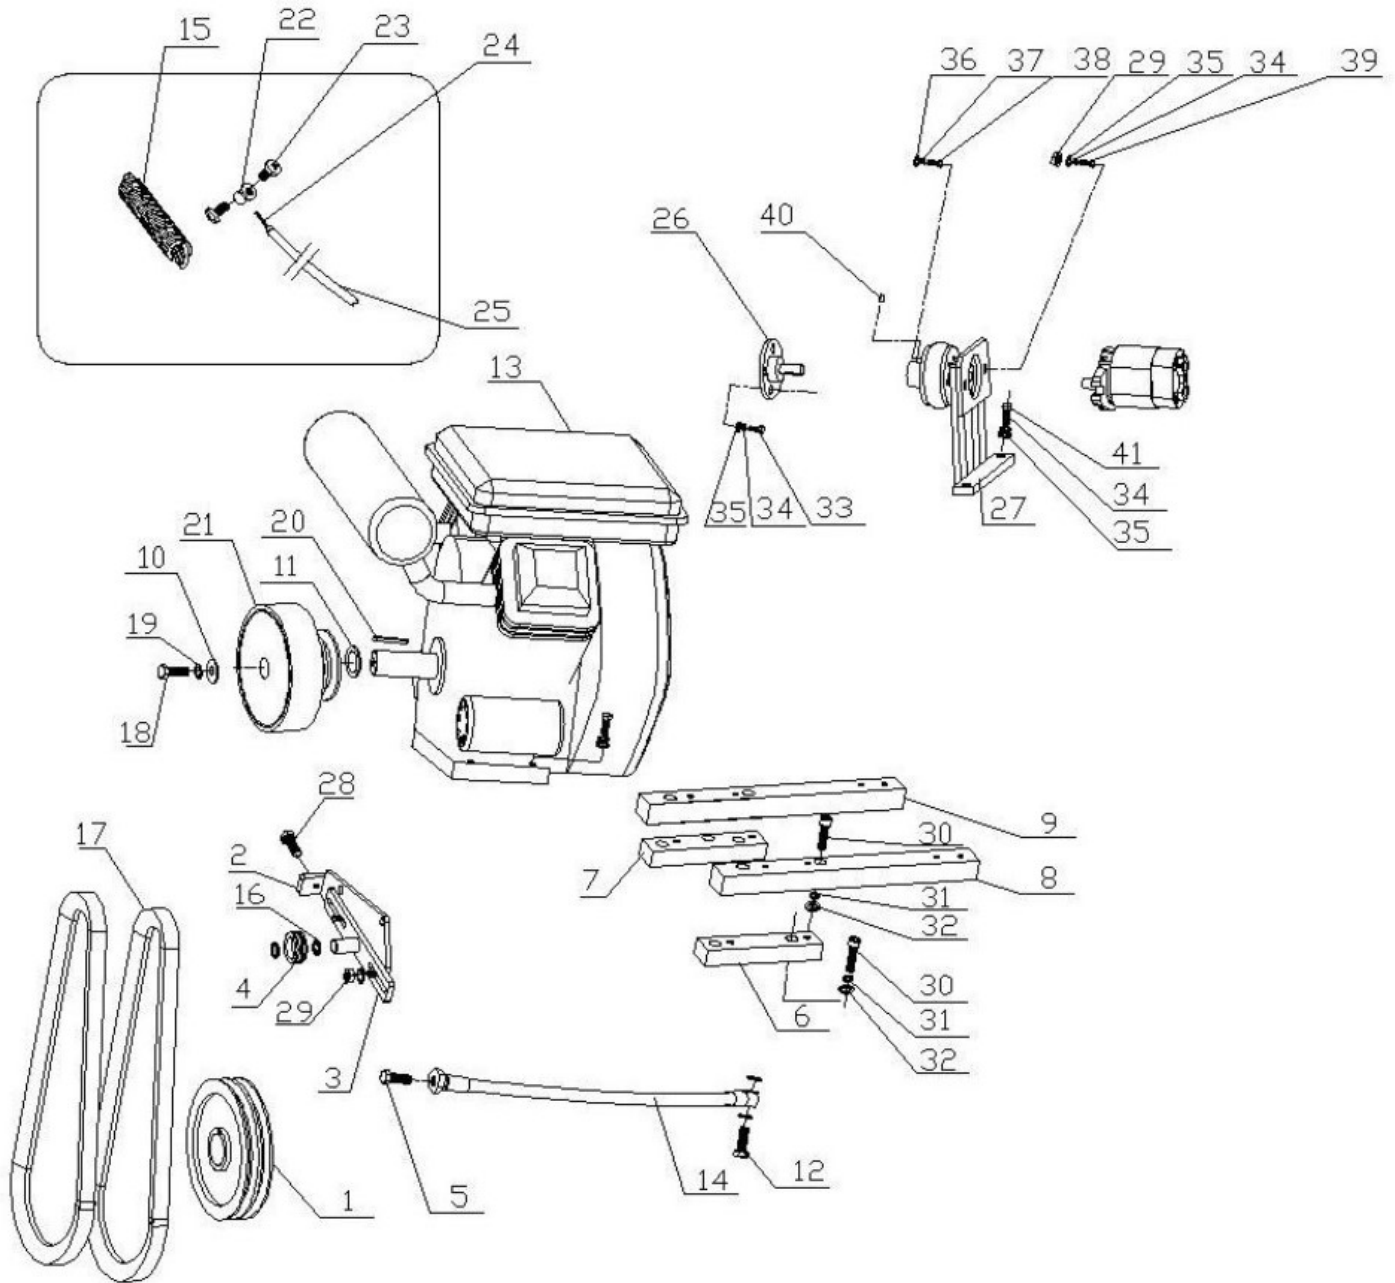


Figure 2: Power System



BXR836HYD, POWER SYSTEM – PARTS LIST 2

Item #	Part #	Description	QTY	Remarks
1	24247	PULLEY	1	
2	24218	MOUNTING PLATE, TENSIONER	1	
3	24219	TENSIONER PLATE, PULLEY	1	
4	888361461A	TENSIONER	1	
5	888361610	BOLT	1	
6	888361423	ENGINE MOUNTING BAR	1	
7	888361424	ENGINE MOUNTING BAR	1	
8	88836H1423	ENGINE MOUNTING BAR	1	
9	88836H1424	ENGINE MOUNTING BAR	1	
10	88JG846A030006	BUSHING	1	
11	888360060	WASHER	1	
12	888361611G	BOLT	1	
13	21400	ENGINE, GX690	1	
14	888361607G	OIL TUBE	1	
15	888361786	SPRING	1	
16	888369063A	BEARING	2	
17	24201	BELT	2	
18	10269	BOLT	1	
19	13491	SPRING WASHER	3	
20	888369155	KEY	1	
21	24200	CLUTCH	1	
22	884365403	CLAMP	1	
23	888369019	BOLT	1	
24	24238	THROTTLE CABLE	1	
25	888369523	THROTTLE CABLE SLEEVE	1	
26	88836H0551	FLANGE	1	
27	88836H0552	SUPPORTING FRAME	1	
28	889605	BOLT	1	
29	889036	NUT	4	
30	889018	BOLT	9	
31	889046	SPRING WASHER	9	
32	889047	WASHER	9	
33	889098	BOLT	4	
34	889037	SPRING WASHER	6	
35	889038	WASHER	6	
36	889330	WASHER	12	
37	889022	SPRING WASHER	12	

CONTINUED ON NEXT PAGE

CONTINUED FROM PREVIOUS PAGE				
38	889093	BOLT	12	
39	889232	BOLT	2	
40	11869	FHSCS, M6-1X8MM	2	
41	889262	BOLT	4	
42	889040	BOLT	4	
	24239	TENSIONER ASSEM, INCL ITEM 2, 3, 4 + 16	1	

INTENTIONALLY LEFT BLANK



PARTS LIST 3 – RIDE ON TROWELS

BXR836HYD, STEERING AND BLADE PITCH SYSTEM

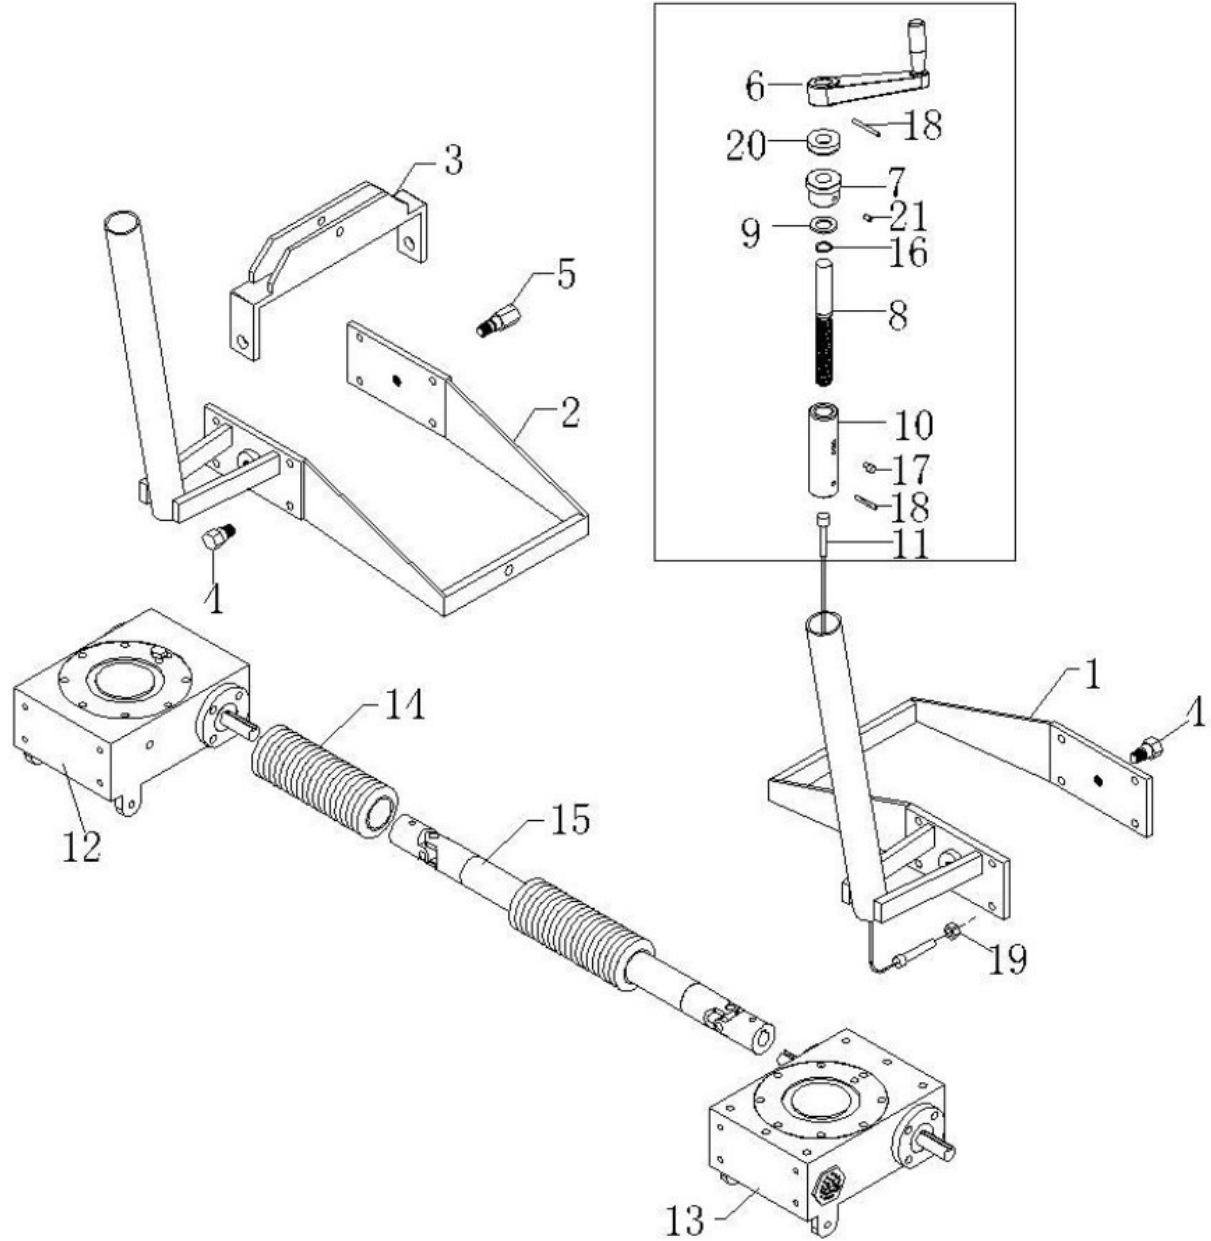


Figure 3: Steering and Blade Pitch System



BXR836HYD, STEERING AND BLADE PITCH SYSTEM – PARTS LIST 3

Item #	Part #	Description	QTY	Remarks
1	888360484A	BRACKET, LEFT	1	
2	888360491A	BRACKET, RIGHT	1	
3	888360494A	BRACKET	1	
4	888360485A	BOLT	3	
5	88836H0492A	BOLT	1	
6	88B8360470	PITCH HANDLE	2	
7	884465502	BUSHING	2	
8	884365503	ADJUST SHAFT	2	
9	884365504	WASHER	2	
10	884465505	ADJUST SHAFT BUSHING	2	
11	24215	PITCH CONTROL CABLE	2	
12	24202	GEARBOX, RIGHT	1	
13	24203	GEARBOX, LEFT	1	
14	24230	RUBBER COVER	2	
15	24229	U-JOINT SHAFT	1	
16	21712	EXTERNAL RETAINING RING	2	
17	21725	SHCS,M6-1x6MM	2	
18	21724	SPRING PIN, M5x35MM	4	
19	889016	NUT	2	
20	889025	BEARING	2	
21	889093	BOLT	2	
	24231	CRANK HANDLE ASSM, INCL ITEMS 6-11, 16-18, 20, 21	2	

PARTS LIST 4 – RIDE ON TROWELS

BXR836HYD, GEARBOX ASSEMBLY, LEFT (CW)

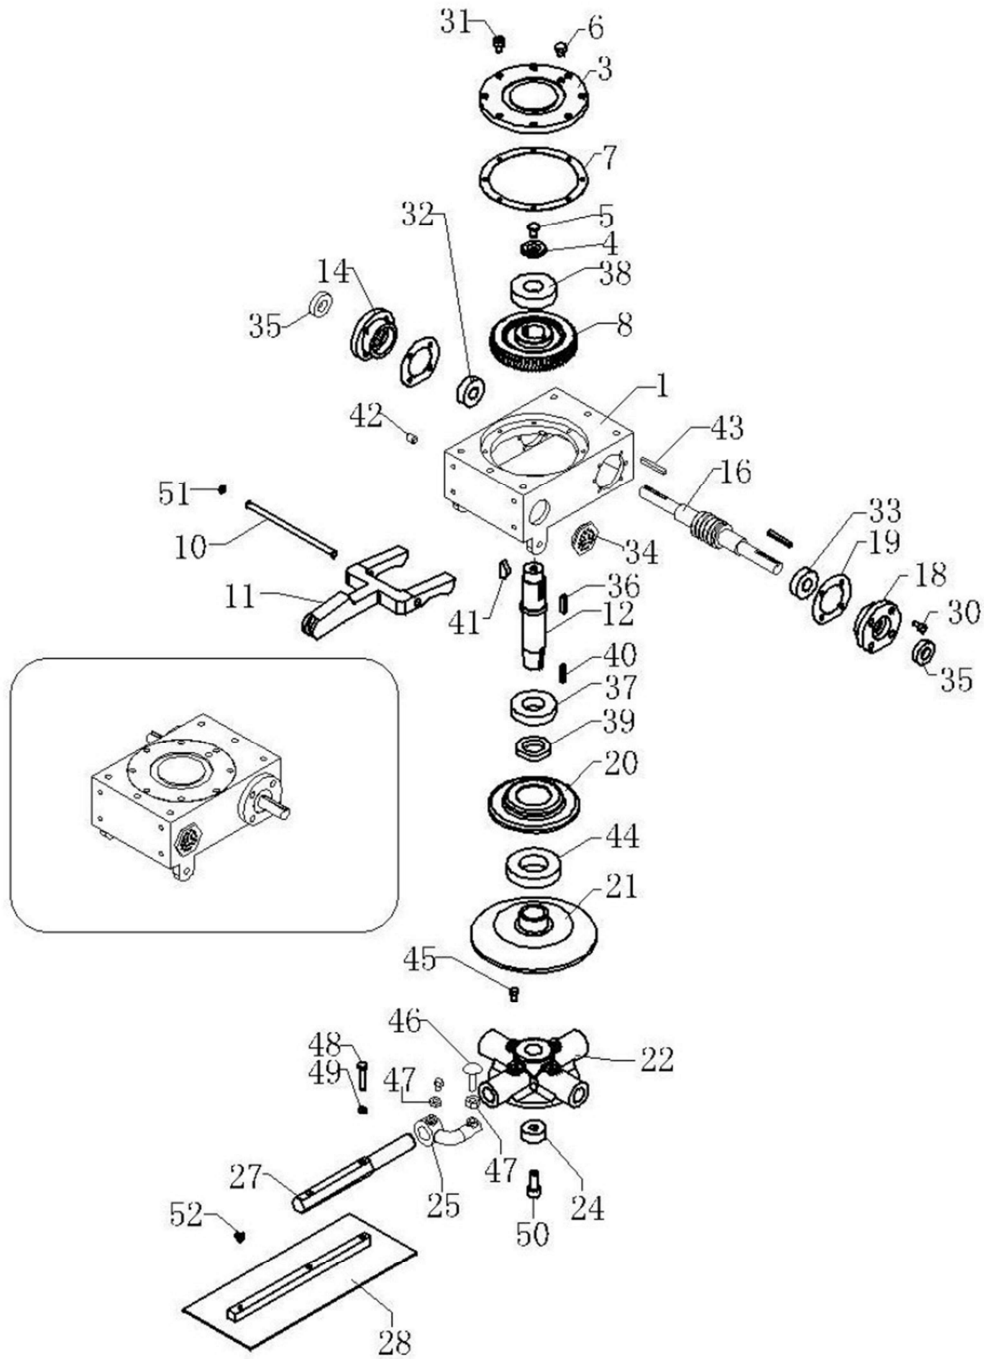


Figure 4: Gearbox Assembly Left (CW)



BXR836HYD, GEARBOX ASSEMBLY LEFT (CW) – PARTS LIST 4

Item #	Part #	Description	QTY	Remarks
1	888364003L	GEARBOX CASING, LEFT	1	
3	888364005	GEARBOX COVER	1	
4	21734	PRESSURE WASHER	1	
5	884344007	BOLT	2	
6	884364100	RELEASE VALVE	1	
7	21842-2 21842-1	SHIMMING	A/R	
8	888364010L	BRONZE GEAR, LEFT	1	
10	21818	SHAFT, YOKE ARM	1	
11	24206	YOKE ARM	1	
12	888364011L	MAIN SHAFT, LEFT	1	
14	21739	BEARING FLANGE	1	
16	888364013L	COUNTER SHAFT, LEFT	1	
18	888364014	BEARING FLANGE	1	
19	21843-1 21843-2	SHIMMING	A/R	
20	21770	PRESSURE PLATE COVER	1	
21	888366003	PRESSURE PLATE	1	
22	24209	LEFT SPIDER PLATE	1	
24	24234	BUSHING	1	
25	24232	LIFT LEVER	4	
27	24207	TROWEL ARM	4	
28	20660	BLADE, 6"x14"	4	
30	889043	BOLT	12	
31	889118	BOLT	8	
32	21754	BEARING	1	
33	31369	BEARING	1	
34	889064	SIGHT GLASS	1	
35	889055	SEAL	2	
36	889531	KEY	1	
37	31438	BEARING	1	
38	10603	BEARING	1	
39	21757	SEAL	1	
40	50459	KEY	1	
41	889156	KEY	1	
42	21747	PLUG	12	
43	889532	KEY	2	

CONTINUED ON NEXT PAGE

CONTINUED FROM PREVIOUS PAGE				
44	21776	BEARING	1	
45	889066	BOLT	4	
46	889067	BOLT	4	
47	889059	NUT	8	
48	889071	BOLT	8	
49	889037	SPRING WASHER	8	
50	11903	BOLT	1	
51	889202	RETAINER PLUG	2	
52	889072	PLUG	4	
	24203	GEARBOX ASSEM LEFT		

INTENTIONALLY LEFT BLANK



PARTS LIST 5 – RIDE ON TROWELS

BXR836HYD, GEARBOX ASSEMBLY, RIGHT (CCW)

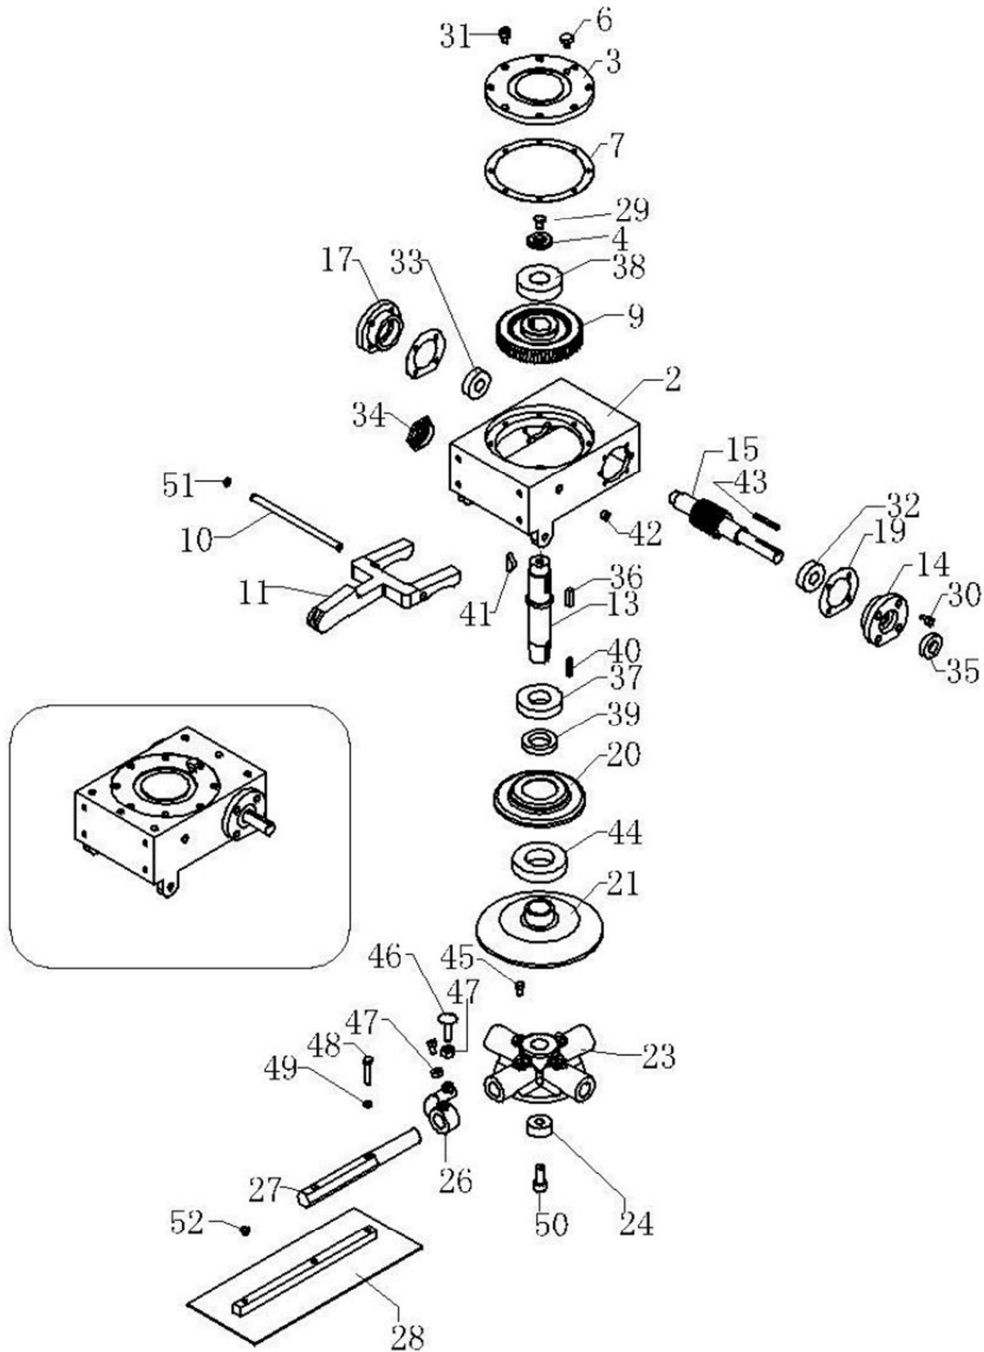


Figure 5: Gearbox Assembly Right (CCW)



BXR836HYD, GEARBOX ASSEMBLY RIGHT (CCW) – PARTS LIST 5

Item #	Part #	Description	QTY	Remarks
2	888364003R	GEARBOX CASING, RIGHT	1	
3	888364005	GEARBOX COVER	1	
4	21734	PRESSURE WASHER	1	
6	884364100	RELEASE VALVE	2	
7	21842-1 21842-2	SHIMMING	1	
9	888364010R	BRONZE GEAR, RIGHT	1	
10	21818	SHAFT, YOKE ARM	1	
11	24206	YOKE ARM	1	
13	888364011R	MAIN SHAFT, RIGHT	1	
14	21739	BEARING FLANGE	1	
15	888364013R	COUNTER SHAFT RIGHT	1	
17	21741	BEARING FLANGE	1	
19	21843-1 21843-2	SHIMMING	2	
20	88446002	PRESSURE PLATE COVER	1	
21	888366003	PRESSURE PLATE	1	
23	888366005R	RIGHT SPIDER PLATE	1	
24	24234	BUSHING	1	
26	24233	LIFT LEVER	4	
27	24207	TROWEL ARM	4	
28	20660	BLADE, 6"x14"	4	
29	889145	BOLT	1	
30	21754	BOLT	12	
31	31369	BOLT	8	
32	889143	BEARING	1	
33	889141	BEARING	1	
34	889064	SIGHT GLASS	1	
35	889055	SEAL	1	
36	889531	KEY	1	
37	31438	BEARING	1	
38	10603	BEARING	1	
39	21757	SEAL	1	
40	50459	KEY	1	
41	889156	KEY	1	
42	21747	PLUG	2	
43	889532	KEY	1	
44	21776	BEARING	1	
45	889066	BOLT	4	

CONTINUED ON NEXT PAGE

CONTINUED FROM PREVIOUS PAGE

46	889067	BOLT	4	
47	889059	NUT	8	
48	889071	NBOLT	8	
49	889037	SPRING WASHER	8	
50	11903	BOLT	1	
51	889202	RETAINING RING	2	
52	889072	PLUG	4	
	24202	GEARBOX ASSEM RIGHT		

INTENTIONALLY LEFT BLANK



PARTS LIST 6 – RIDE ON TROWELS

BXR836HYD, HYDRAULIC SYSTEM COMPONENTS

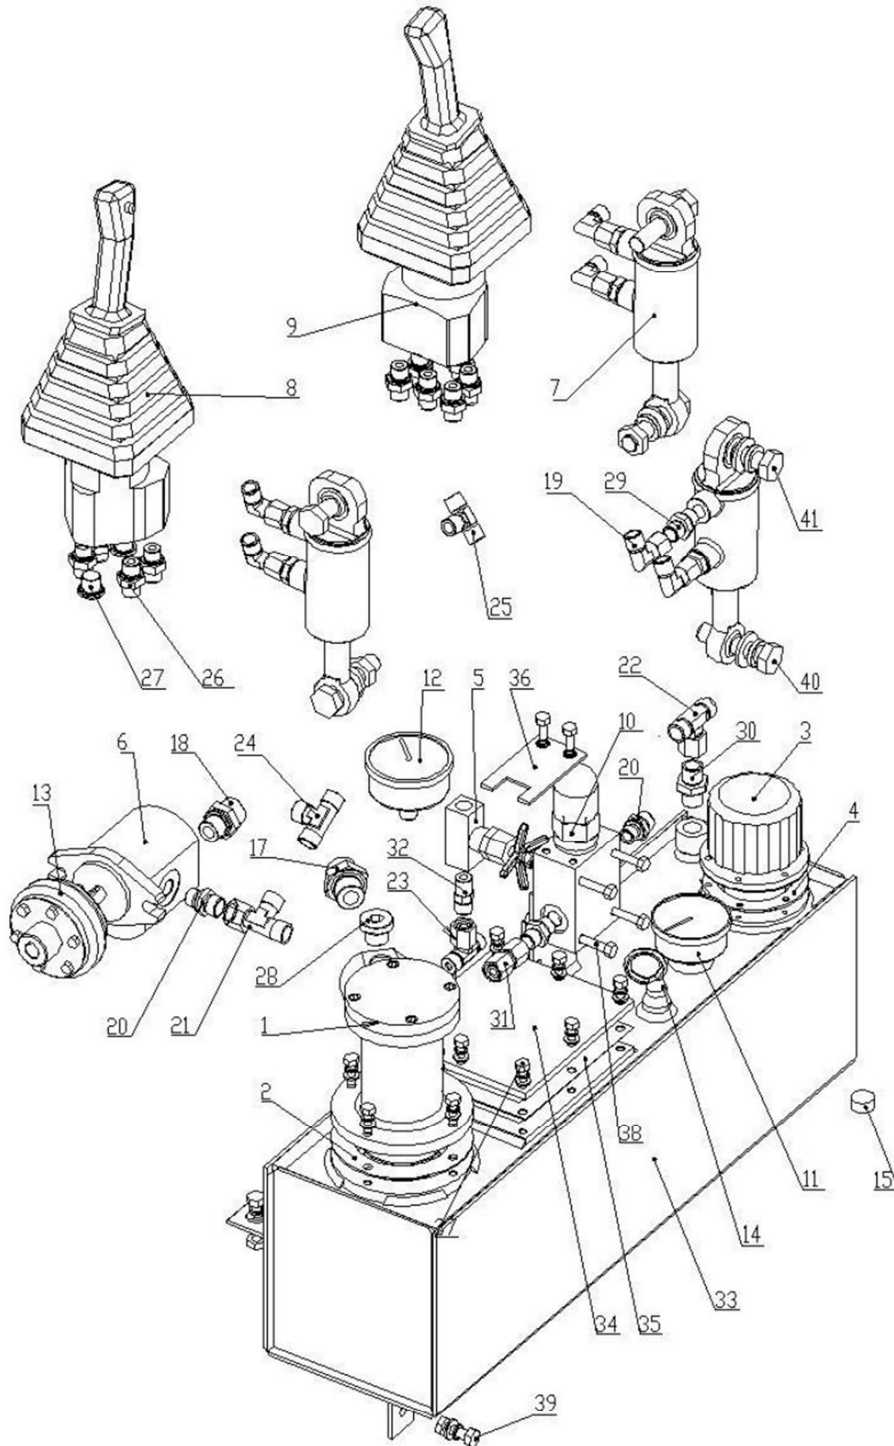


Figure 6: Hydraulic System Components



BXR836HYD, HYDRUALIC SYSTEM COMPONENTS – PARTS LIST 6

Item #	Part #	Description	QTY	Remarks
1	889791	OIL FILTER	1	
2	889791-DP	SHIMMING	1	
3	889793	OIL TANK CAP	1	
4	889793-DP	SHIMMING	1	
5	889795	VALVE	1	
6	889796	HYDRAULIC PUMP	1	
7	889798	HYDROCYLINDER	3	
8	889801-Z	HYDRAULIC CONTROL LEVER	1	
9	889801-Y	HYDRAULIC CONTROL LEVER	1	
10	889803	SPILL VALVE	1	
11	889805	TEMPERATURE GAUGE	1	
12	889807	OIL PRESSURE GAUGE	1	
13	889809	COUPLING	1	
14	889812-836H	OIL GAUGE	1	
15	889811	PLUG	1	
17	889815	CONNECTOR	1	
18	889816	CONNECTOR	1	
19	889817	CONNECTOR	6	
20	889818	CONNECTOR	2	
21	889819	TEE CONNECTOR	1	
22	889820	TEE CONNECTOR	1	
23	889821	TEE CONNECTOR	1	
24	889822	TEE CONNECTOR	1	
25	889823	TEE CONNECTOR	1	
26	889824	CONNECTOR	10	
27	889825	PLUG	2	
28	889826	PLUG	1	
29	889827	CONNECTOR	7	
30	889828	CONNECTOR	1	
31	889829	CONNECTOR	1	
32	889830	CONNECTOR	1	
33	88836H-YX	OIL TANK	1	
34	88836HYX-FLG	FLANGE	1	
35	88836HYX-FLG-DP	SHIMMING	1	
36	88836H-FJ3	BASE PLATE	1	
37	88M6*16	HARDWARE KIT	14	
38	88M6*55	HARDWARE KIT	4	
39	88M8*22	HARDWARE KIT	4	
40	88M14*60	HARDWARE KIT	2	
41	88M14*50	HARDWARE KIT	4	



PARTS LIST 7 – RIDE ON TROWELS

BXR836HYD, SPRAY SYSTEM

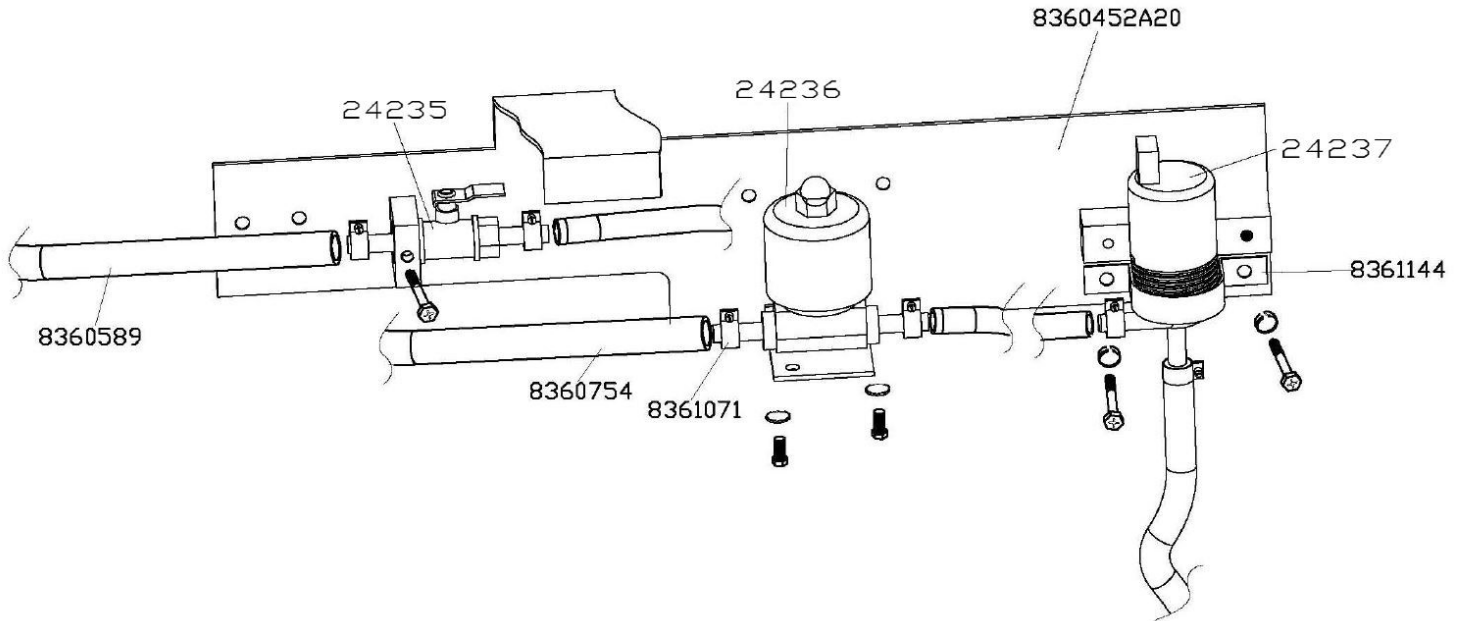


Figure 7: Spray System

BXR836HYD, SPRAY SYSTEM – PARTS LIST 7

Part #	Description	QTY	Remarks
8360589	FUEL LINE	2	
24235	VALVE	1	
8360754	WATER PIPE	2	
8361071	JOINT	6	
24236	SOLENOID PILOT ACTUATED VALVE	1	
24237	WATER PUMP	1	
8361144	MOUNTING PLATE, WATER PUMP	1	



PARTS LIST 8 – RIDE ON TROWELS

BXR836, FOOT THROTTLE KIT

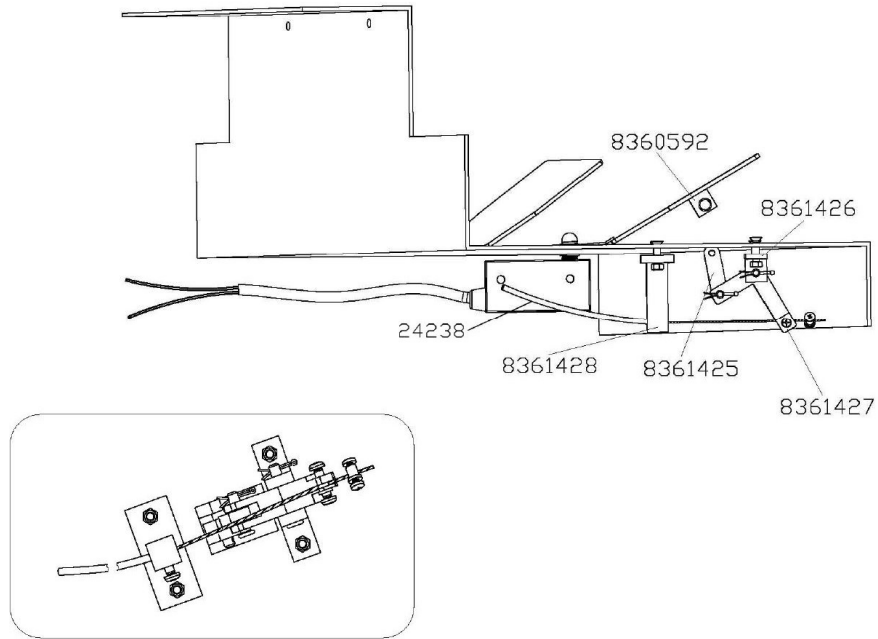


Figure 8: Foot Throttle Kit

BXR836, FOOT THROTTLE KIT – PARTS LIST 8

Part #	Description	QTY	Remarks
8360592	THROTTLE PEDAL	1	
8361425	THROTTLE PARTS	1	
8361426		1	
8361427		1	
8361428	THROTTLE CABLE SUPPORT	1	
24238	THROTTLE CABLE	1	



PARTS LIST 9 – RIDE ON TROWELS

BXR836, TRANSPORTER

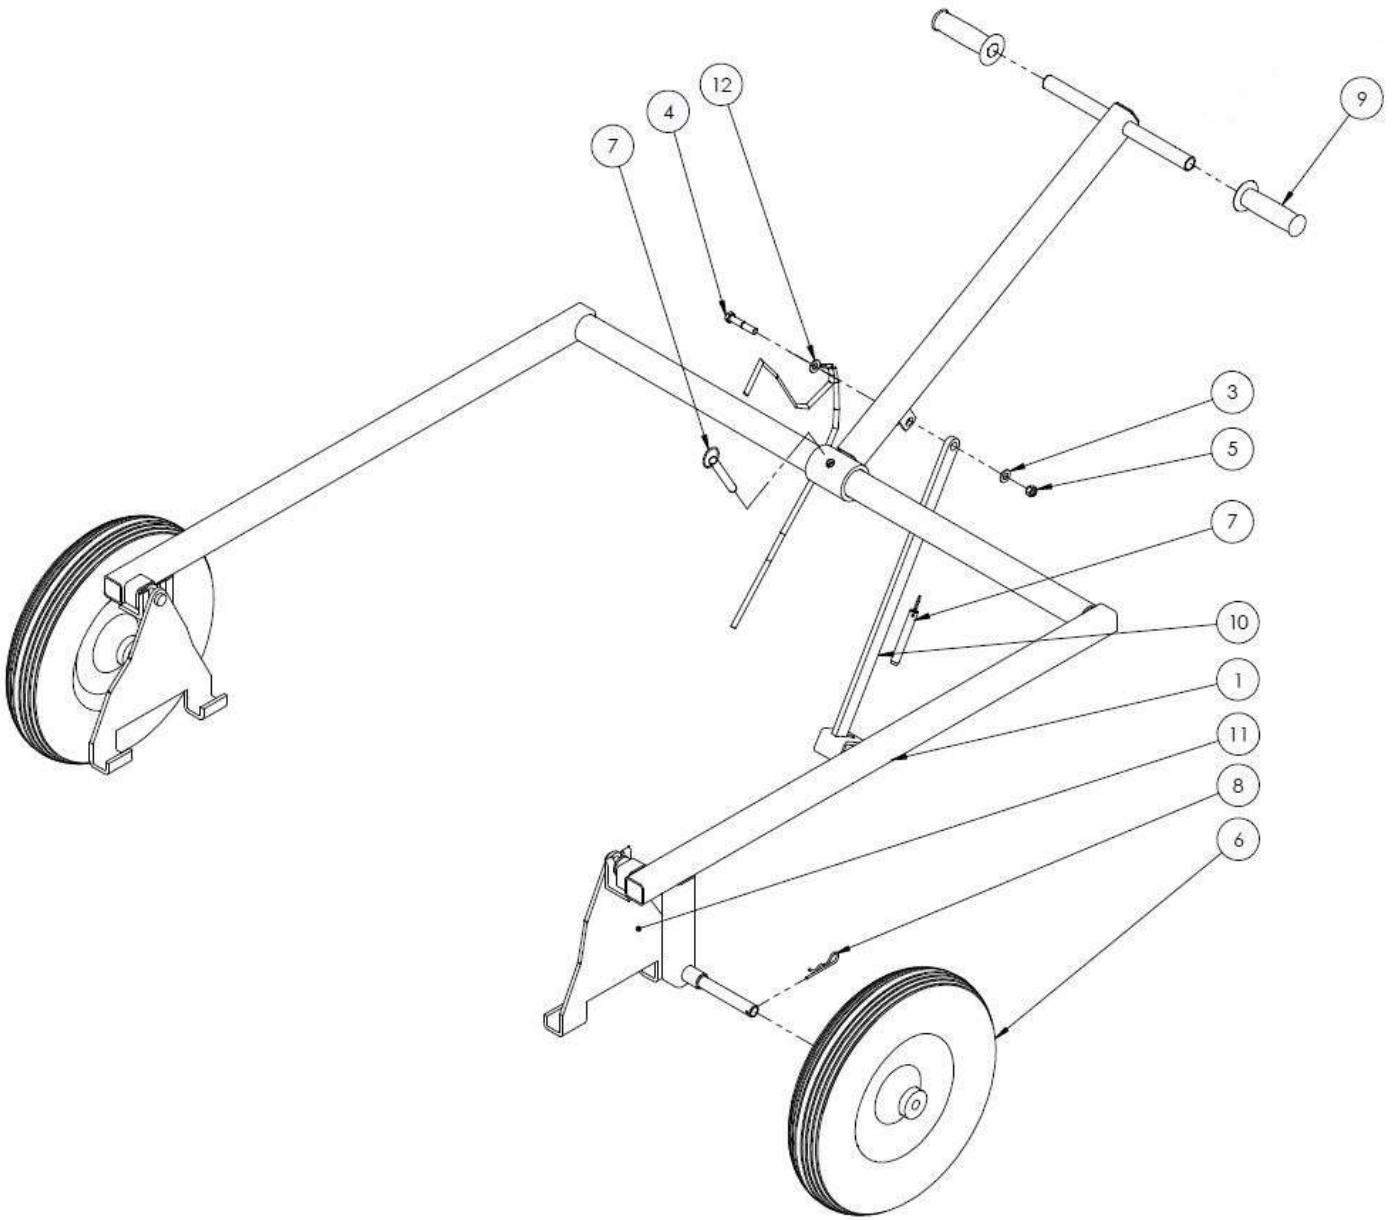


Figure 9: Transporter

BXR836, SPRAY SYSTEM – PARTS LIST 9

Item #	Part #	Description	QTY	Remarks
1	22594	TRANSPORTER FRAME	1	
3	11200	3/8" WASHER	1	
4	12859	HHCS, 3/8-16 UNC X 2" LC	1	
5	10317	3/8-16 LOCKNUT, NYLON	1	
6	13198	WHEEL 16" DIA X 4" HUB	2	
7	12487	HITCH PIN LARGE 3-1/2" LG	2	
8	50265	COTTER PIN 1/8" DIA	2	
9	10509	HANDLE GRIP	2	
10	14717	PICKUP BAR	1	
11	14715	TRANSPORTER BRACKET	2	
12	14716	CHAIN LINK W/ 3/8" WASHER	1	

CONTRACTOR PROVEN EQUIPMENT SINCE 1946



BARTELL GLOBAL

170 Traders Blvd E
Mississauga, ON L4Z 1W7
Canada

4701 Allmond Avenue
Louisville, KY 40209
United States

200 Commerce Drive
Freehold, NJ 07728
United States

Honeyholes Lane
Dunholme, Lincoln LN2 3SU
United Kingdom

